



ASSEMBLY INSTRUCTION

228-000040

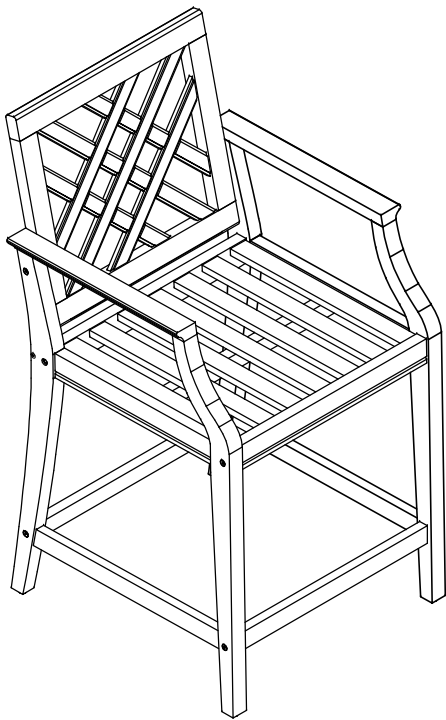

Components:

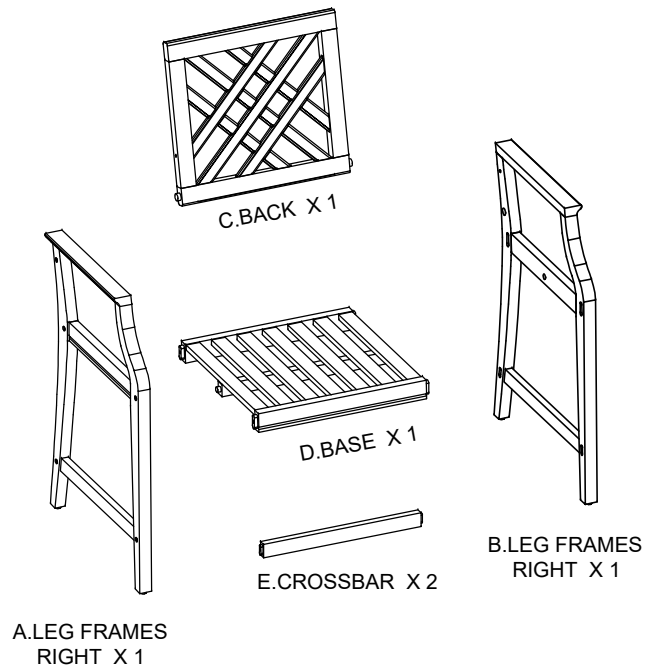

These instructions must be used to ease the assembly of your furniture. Please ensure that you have all the components before assembly. Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.




① SCREW M6 x 70 = 10pcs




② Allen Key 4 x 1

Step 1:

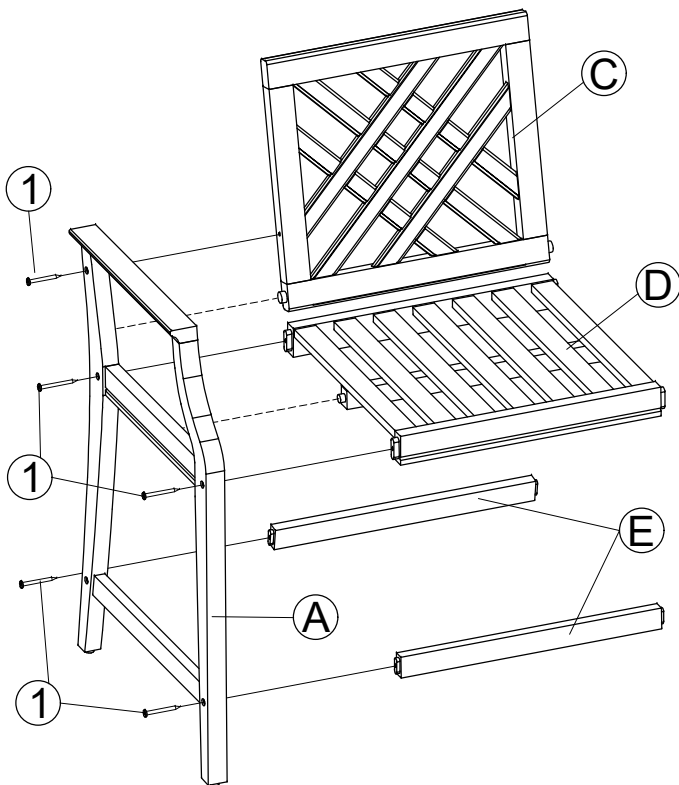

Step 2:

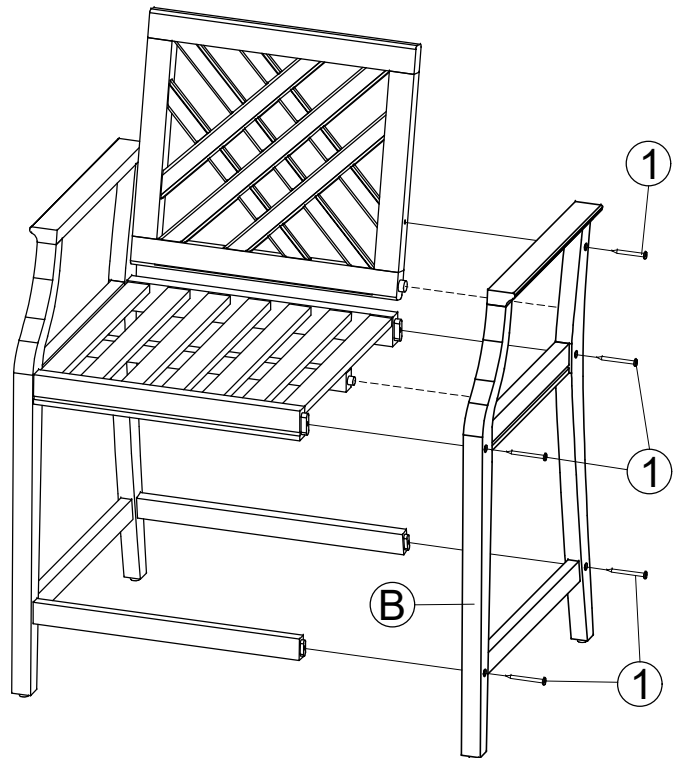

Finished