



Screw the chipboards in the direction shown by placing them on the metal feet so that there is no gap as seen in the image.

Do the same for the other metal leg. Screw it, taking care that the chipboard does not overflow from the metal.

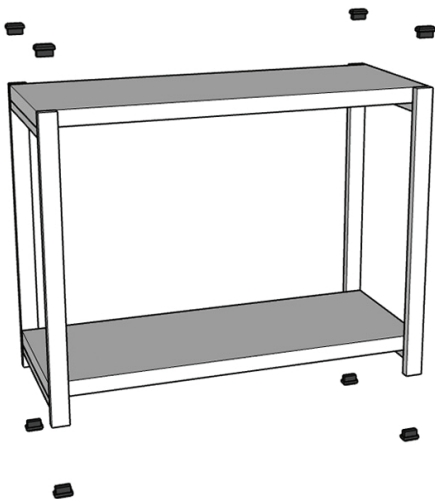

Insert the 8 plastic plugs included in the package by hitting the upper and lower parts of the metal legs with a hard object.

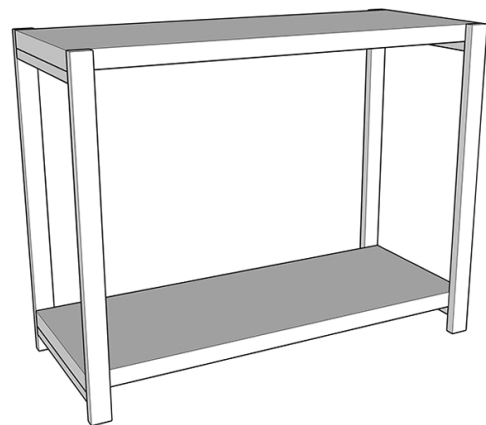

The product is ready to use.

321-000034