




Place the 24 cm small pieces to align with the holes of the 150 cm large piece and screw them together.

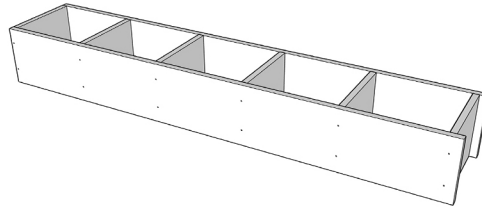

Place the other 150 cm piece in such a way that the holes align, and then screw them together.

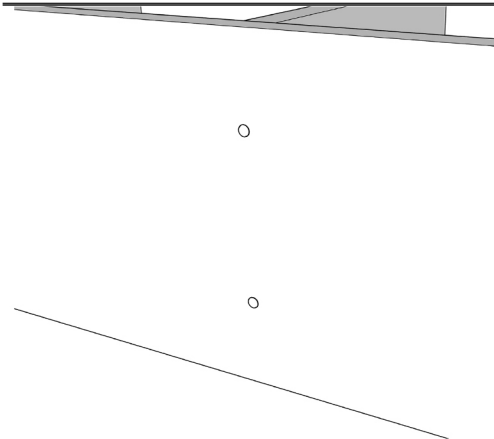

Attach the adhesive caps that came in the package onto all of the screw heads.



Product is ready to use.