

ASSEMBLY INSTRUCTION


330-000014

Before you begin, please follow Assembly Instruction carefully. Follow them step by step.

STEP 1

(A) M6 X 50MM JCBC SCREW - 2 PCS


(D) M4 ALLEN KEY (BALL TYPE) - 1 PC

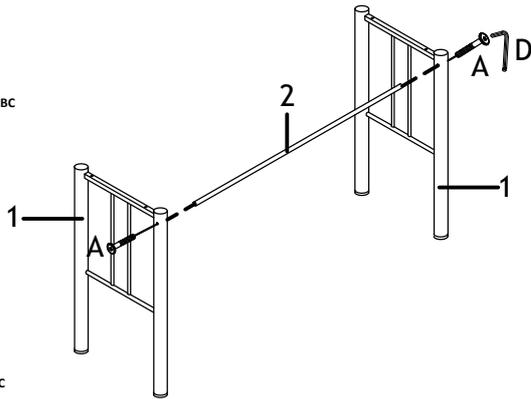


STEP 2

(B) M4 X 16MM C/B SCREW - 4 PCS

REMARK : ATTACH PART 3 USING (B) SCREW AND POZI SCREWDRIVER AS SHOWN.
REQUIRED ASSEMBLY TOOLS : POZI SCREWDRIVER - 1PC

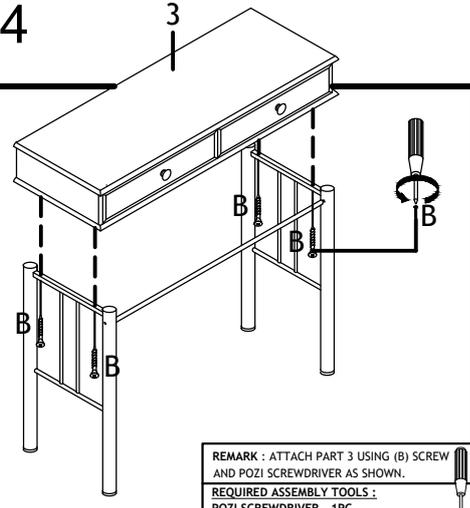


STEP 3

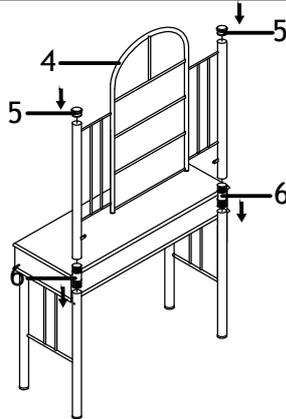

STEP 4


(C) M4 X 16MM C/B SCREW - 2 PCS

REMARK : ATTACH PART 4 USING (C) SCREW AND POZI SCREWDRIVER AS SHOWN.
REQUIRED ASSEMBLY TOOLS : POZI SCREWDRIVER - 1PC

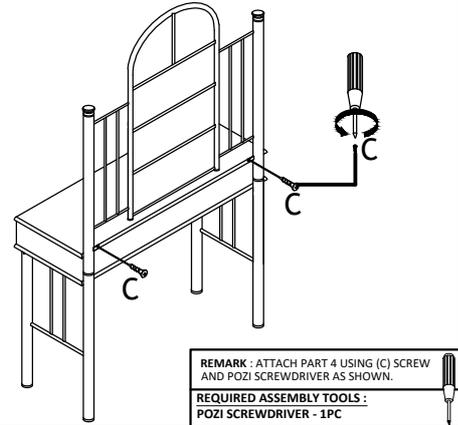


ASSEMBLY INSTRUCTION

Before you begin, please follow Assembly Instruction carefully. Follow them step by step.

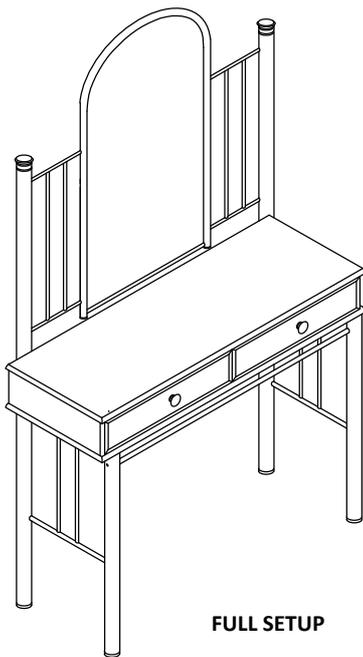

PART LIST

1) TABLE LEGS X 2 SETS 	4) MIRROR X 1 SET 
2) PART A X 1 PC 	5) CHROME CAP X 2 PCS 
3) TABLE WITH DRAWER X 1 PC 	6) METAL JOIN X 2 PCS 

HARDWARE LIST

	
(A) M6 X 50MM JCBC SCREW - 2 PCS	(C) M4 X 16 MM C/B SCREW - 2 PCS
	
(B) M4 X 32 MM C/B SCREW - 4 PCS	(D) M4 ALLEN KEY (BALL TYPE) X 1 PC

ASSEMBLY INSTRUCTION


Before you begin, please follow Assembly Instruction carefully. Follow them step by step.

STEP 1

(A) M6 X 50MM JCBC SCREW - 4 PCS


(C) M6 "L" NUT X 4 PCS

(D) M4 ALLEN KEY (BALL TYPE) - 1 PC

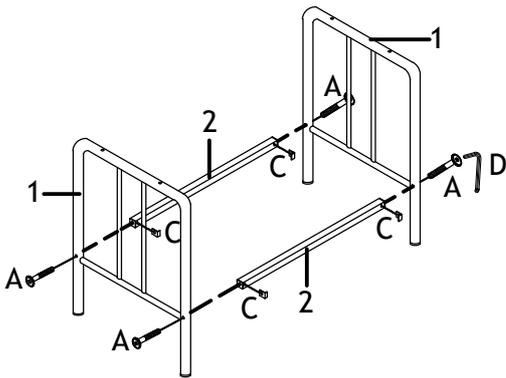


STEP 2

(B) M4 X 32MM C/B SCREW - 4 PCS

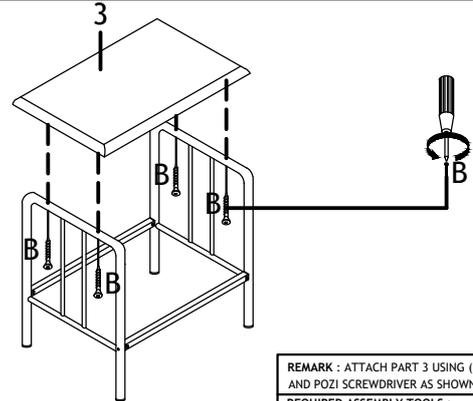

REMARK : ATTACH PART 3 USING (B) SCREW AND POZI SCREWDRIVER AS SHOWN.
REQUIRED ASSEMBLY TOOLS : POZI SCREWDRIVER - 1PC


STEP 3

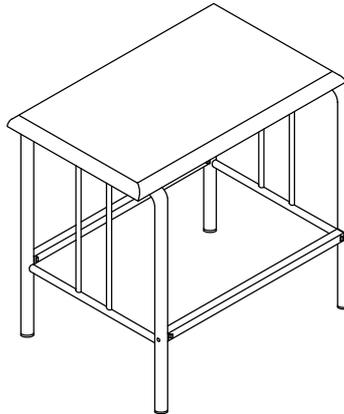

FULL SETUP STOOL

ASSEMBLY INSTRUCTION

Before you begin, please follow Assembly Instruction carefully. Follow them step by step.

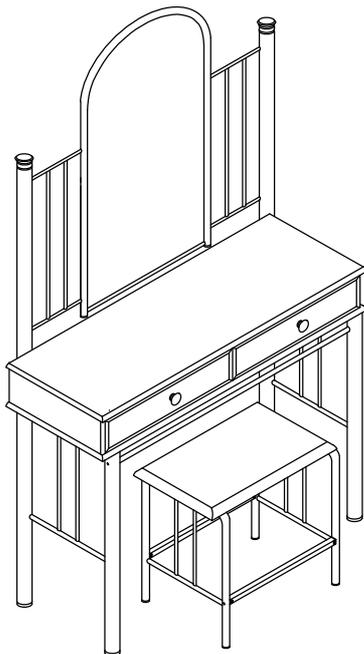

FULLY SETUP DRESSING TABLE

PART LIST


1) TABLE LEGS X 2 SETS



2) PART A X 1 PC



3) CHAIR SEAT X 1 PC



HARDWARE LIST



(A) M6 X 50MM JCBC SCREW - 4 PCS



(C) M6 "L" NUTS X 4 PCS



(B) M4 X 32 MM C/B SCREW - 4 PCS



(D) M4 ALLEN KEY (BALL TYPE) X 1 PC