




361-000019

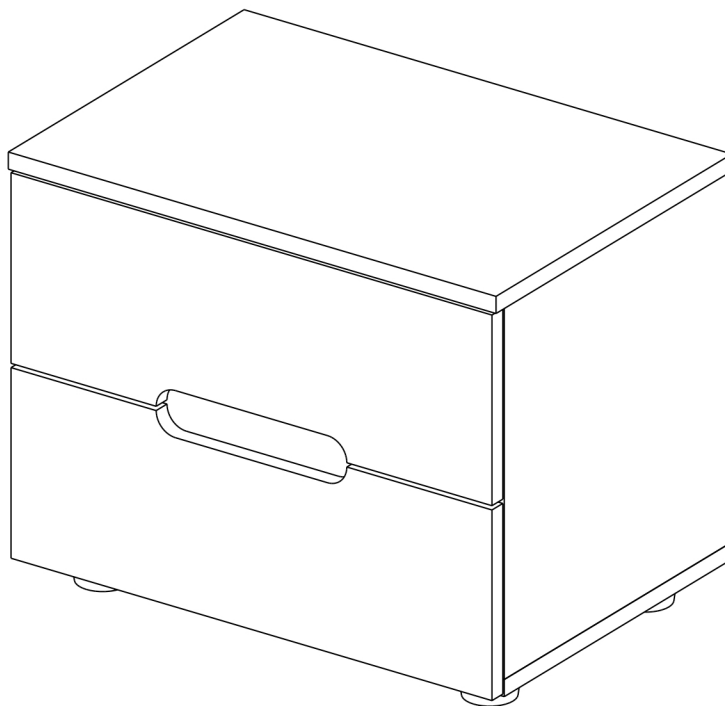














NIGHTSTAND ATHENA





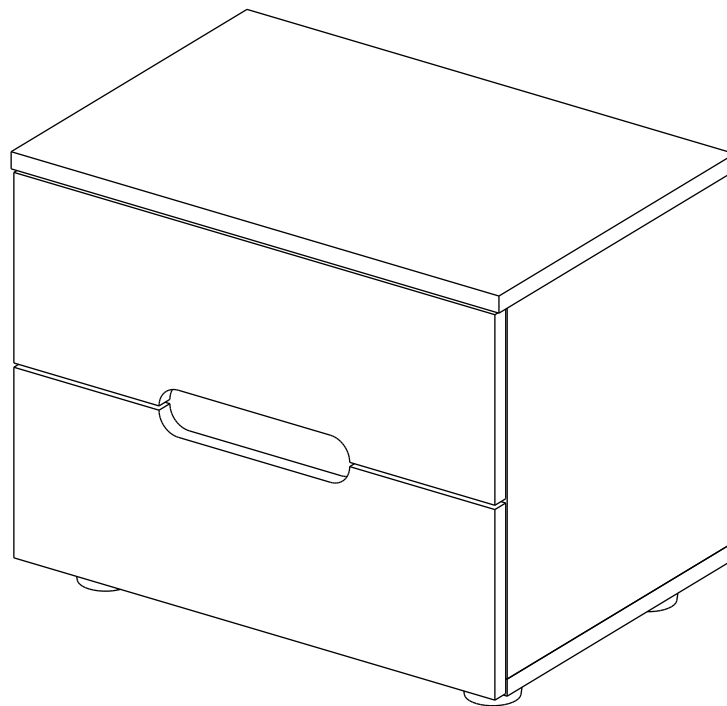


NIGHTSTAND ATHENA

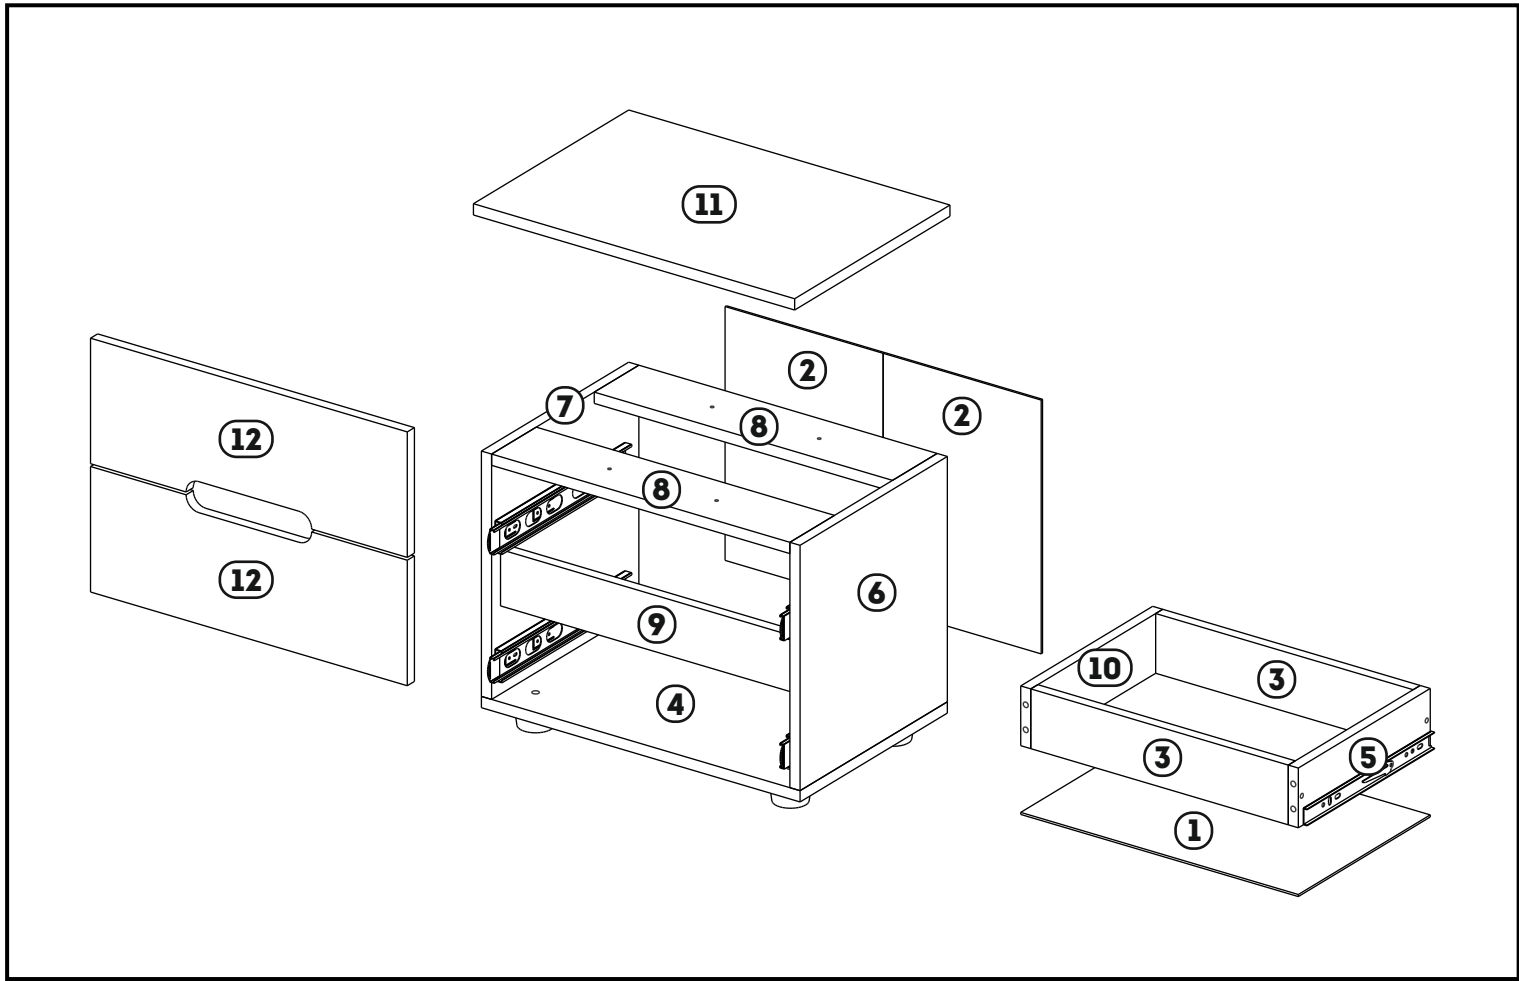

No	a*b	X	Pack
1	442x300	2	1/2
2	360x248	2	1/2
3	410x86	4	1/2
4	500x330	1	1/2
5	300x86	2	1/2
6	348x330	1	1/2
7	348x330	1	1/2
8	100x468	2	1/2
9	468x80	1	1/2
10	300x86	2	1/2
11	504x348	1	1/2
12	178x497	2	2/2

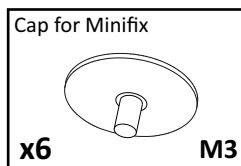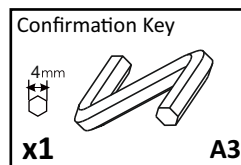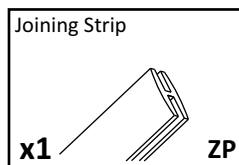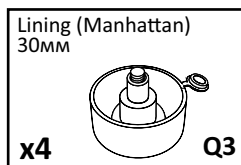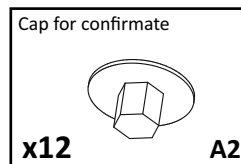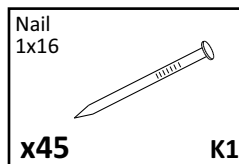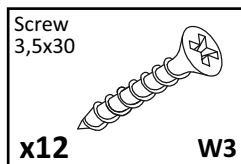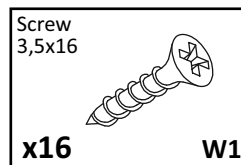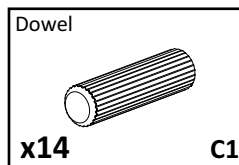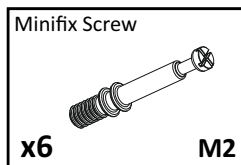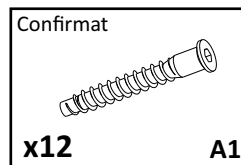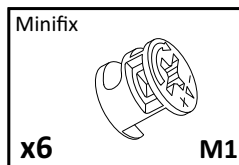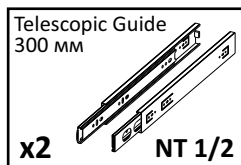

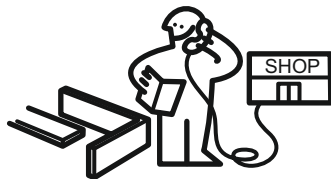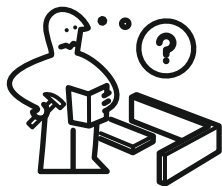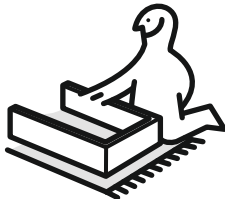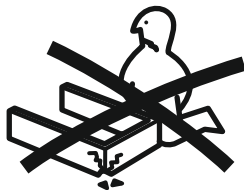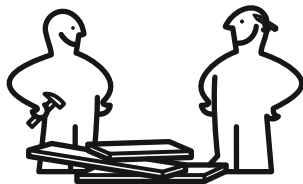

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE



- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1


Screw
3,5x16

**x8****W1**




Telescopic Guide
300 mm

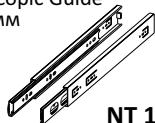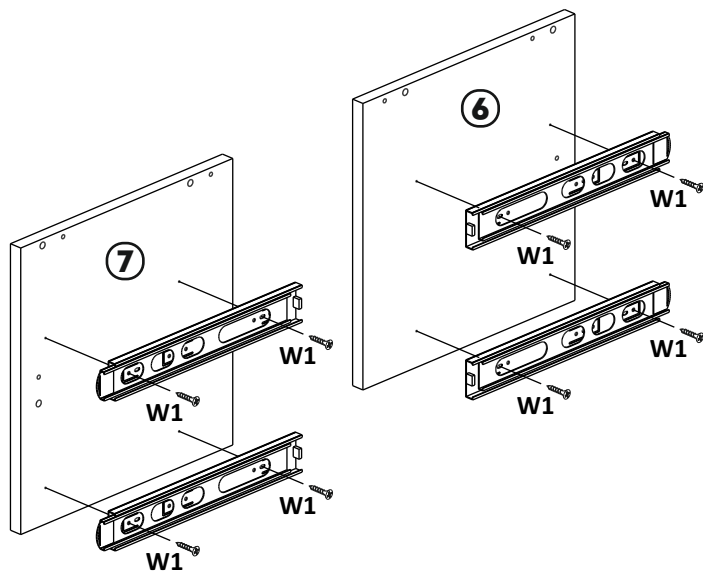**x2****NT 1****2**

Minifix Screw

**x6****M2**

Dowel

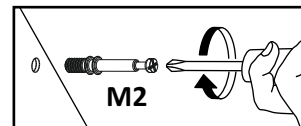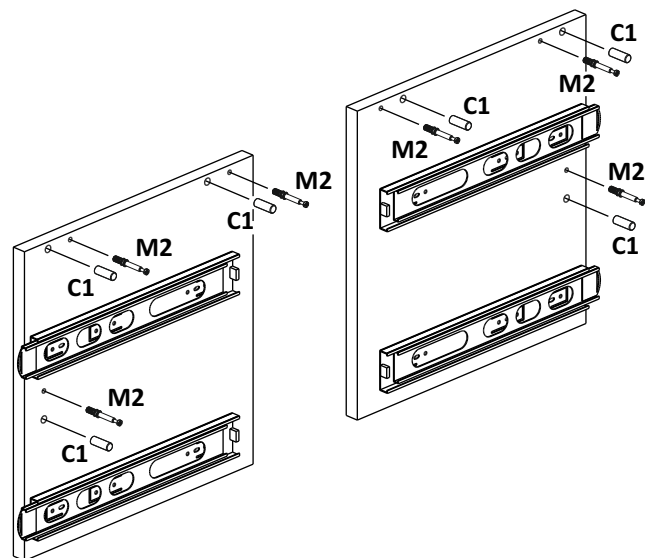**x3****C1**


3

Minifix





x6

M1

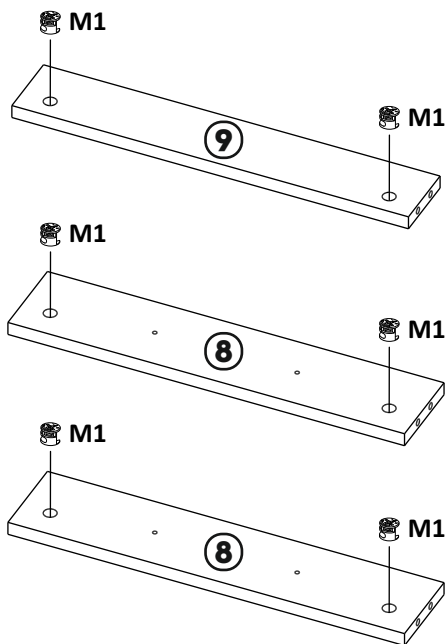


4

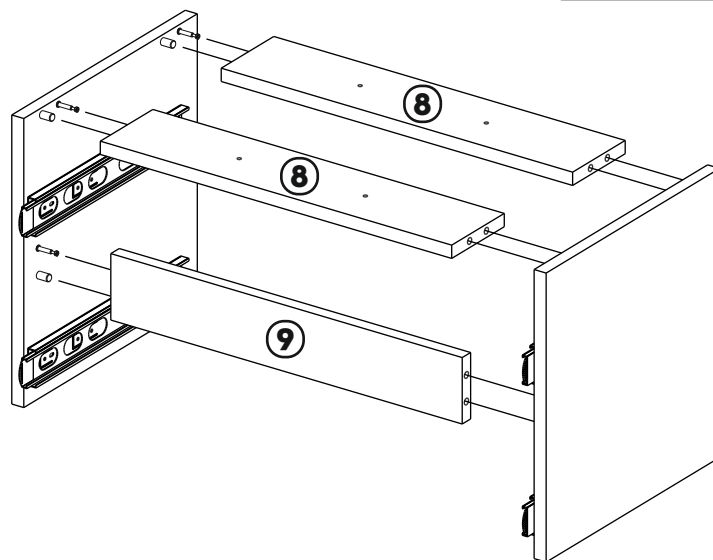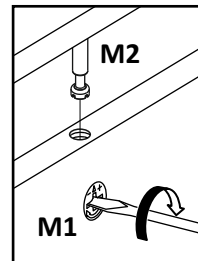

5


Confirmat



x4


A1

Screw
3,5x30




x4

W3

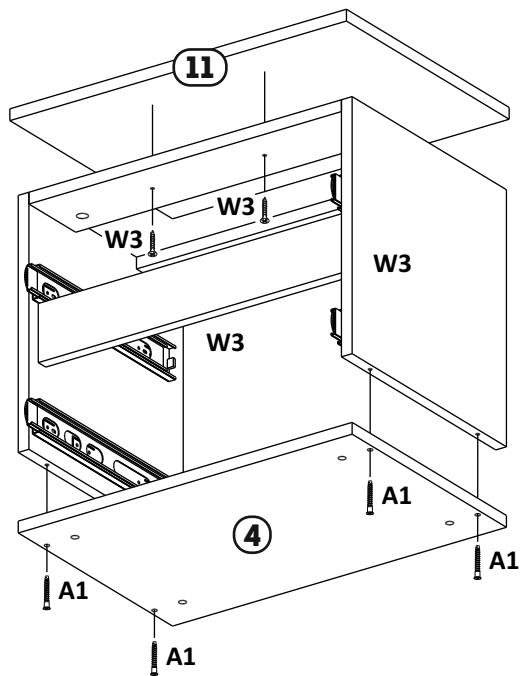

6


Nail
1x16



x17

K1


Joining Strip



x1




ZP

Lining (Manhattan)
30MM




x4

Q3

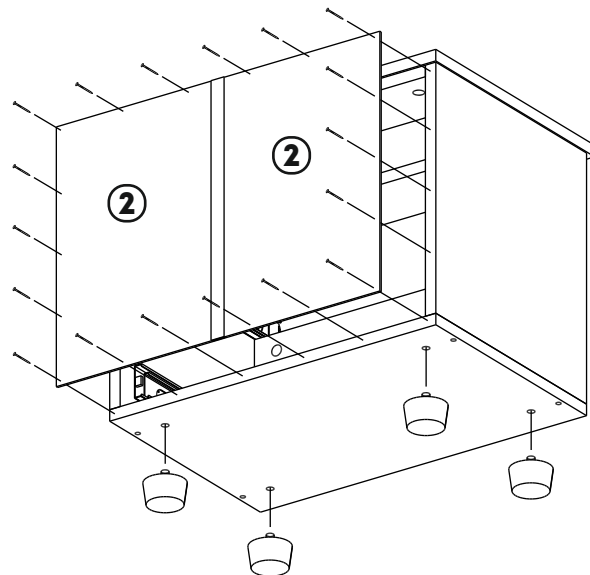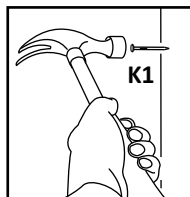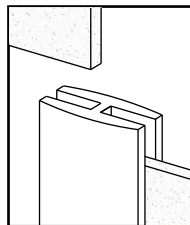

7

Confirmat



x8




A1

Cap for confirmate




x8

A2

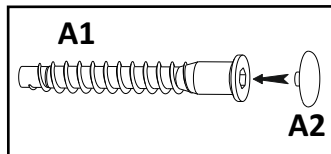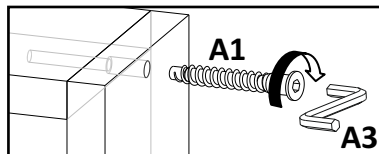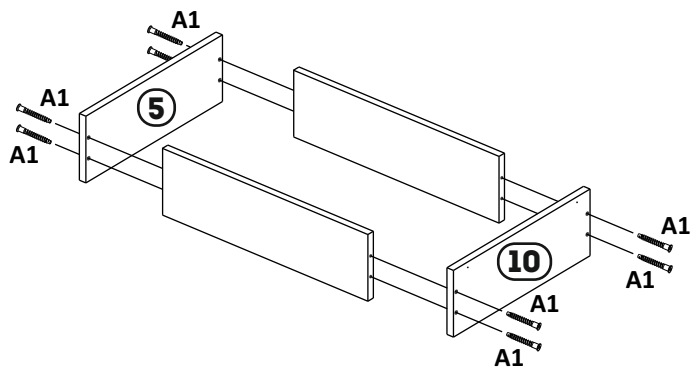

8

Screw
3,5x16



x4



W1

Telescopic Guide
300 mm



x1

NT 2

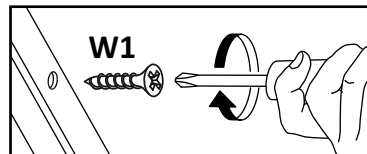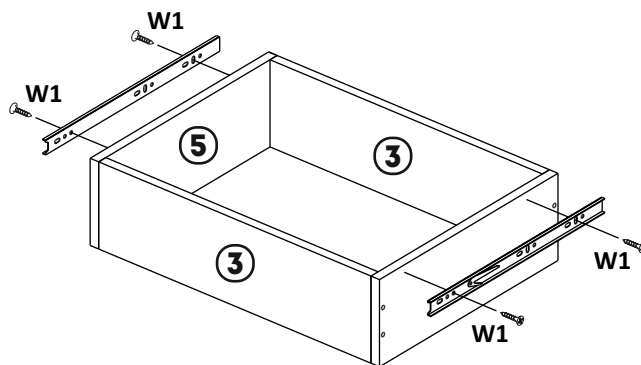

9

Dowel



x4

C1

Nail
1x16

x14

K1

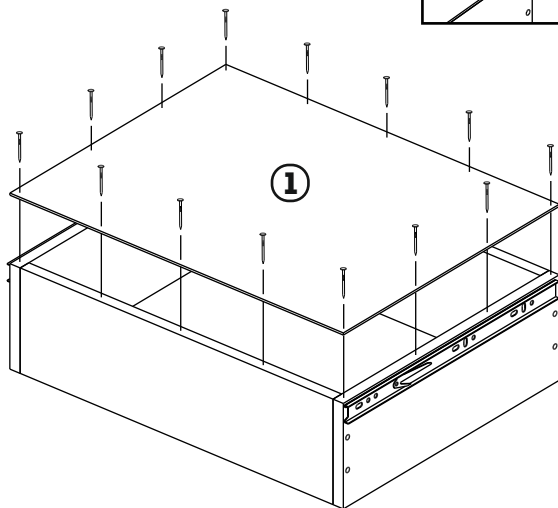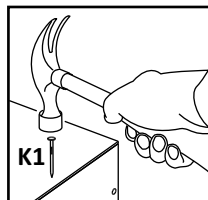

10

Screw
3,5x30

x4

W3

Dowel

x4

C1

